





HydroMassage and CryoLounge+ Space Recommendations


MODEL	IMAGE	SPECS	WEIGHT	VOLTAGE	PHASE	Amps
CryoLounge+		80" L x 33" W x 42" H (38" W with Touchscreen)	290 lbs	110 Volts	Single	15A Outlet (draws 12A)
HydroMassage		91" L x 35" W x 43" H	385 lbs with water	208-240V, 60 Hz	Single	30A Outlet (draws 23A)

Recommended Space / Dimensions:

The HydroMassage Lounge and Recovery Lounge (CryoLounge) do not require private rooms.

When installed in a semi-private or more open area, the following guidelines are recommended:

- Exterior product width (accounting for Touchscreen movement):
 - HydroMassage Lounge: 35" W
 - Recovery Lounge (CryoLounge): 38" W
- Recommended distance between units: 48"
- Minimum distance between units: 36"
- Recommended min 4" gap between units and walls
- Min private room size for 1 CryoLounge: 8' D x 6.5' W
- Min private room size for 1 HydroMassage: 9' D x 6.5' W

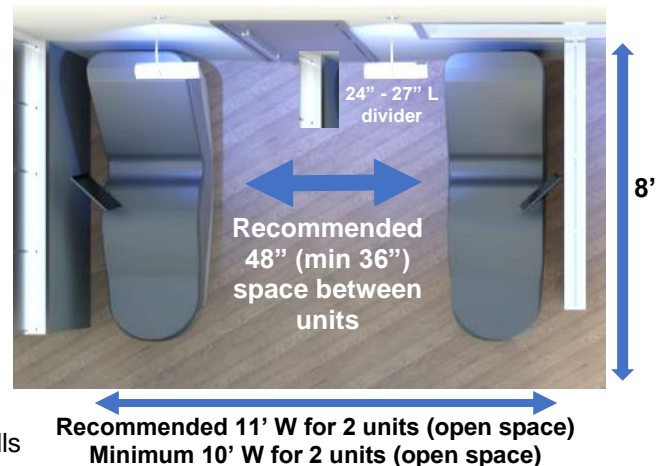

Check ADA guidelines for compliance to ensure accessibility.

